



Chevrolet ³⁻⁰⁹

DeLuxe Edition

- ⑨ NEXT ATTACH PIECE NO. 6 TO PIECE NO. 1 BY INSERTING TABS 2F, 2G, 2H AND 2J INTO SLOTS 2F, 2G, 2H AND 2J (SEE FIG. 8)

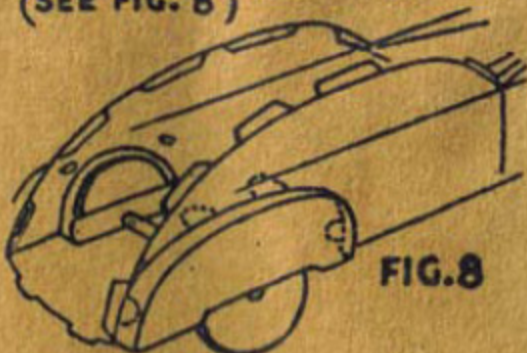


FIG. 8

- ⑩ ATTACH "PIECE NO. 7" BY INSERTING TABS 2K, 2L, 2M, 2N, 2O, 2P, 2Q, 2R, 2S, 2T, 2B, 2F, AND 2U INTO SLOTS 2K, 2L, 2M, 2N, 2O, 2P, 2Q, 2R, 2S, 2T, 2B, 2F AND 2U (SEE FIG. 9)

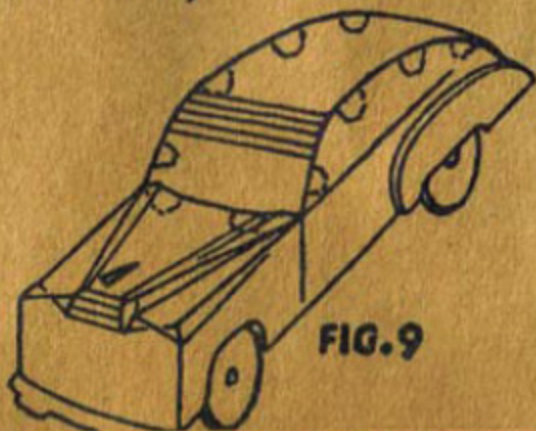


FIG. 9

- ⑪ ATTACH "PIECE NO. 8" BY INSERTING TABS 2V, 2W, 2X AND 2Y INTO SLOTS 2V, 2W, 2X AND 2Y (SEE FIG. 10)



FIG. 10

- ⑫ FINALLY, ATTACH "PIECE NO. 9" BY INSERTING TABS 2Z AND 3Z INTO SLOTS 2Z AND 3Z. (SEE FIG. 11)



FIG. 11

SEE THE NEW CHEVROLET
AT YOUR DEALERS TODAY



New CHEVROLET FLEETLINE
Deluxe
TWO-DOOR SEDAN